

## Mini U-Talk commands set for small supervision application

| Cmde    | Description                               | Answer            | Unit of the returned value |
|---------|-------------------------------------------|-------------------|----------------------------|
| A       | Enable character echo                     | No answer         |                            |
| Ax 1    | Open U-Talk dialog                        | No answer         |                            |
| Si      | System identifier                         | Data1 Data2 Data3 | Family Type SoftLevel      |
| Si1     | System identifier (ASCII string expected) | Data1 Data2 Data3 | Self documented answer     |
| Sm data | Set delay before Power On                 | OK                | 0 <= minutes <= 65535      |
| Sn data | Set remote shutdown delay                 | OK                | 0 <= secondes <= 65535     |
| Ss      | System status                             | Status1           | See below                  |
| Sx 0    | UPS off                                   | OK                |                            |
| Z       | Disable character echo                    | No answer         |                            |

Any commands ? means unrecognized command

Ss answer explanation : 0xx0000x is normal value bit0 is on the right.  
bit7 is on the left.

Bits meanings :

bit0 : not used  
bit1 : UPS overload  
bit2 : working on battery  
bit3 : End of battery operation prealarm  
bit4: battery fault  
bit5 : not used  
bit6 : not used  
bit7 : UPS alarm

Typical monitoring sequence : (initialization and monitoring)

Z  
Ax 1  
Si  
Si1  
Ss  
Ss  
Ss  
And so on

Typical shutdown sequence :

Sm 31  
Sn 1800  
Sx 0

Nota bene : this U-Talk mini set corresponds to ES+ UPSs.  
Some UPSs may include more than this commands.  
Current list is not exhaustive.  
U-Talk commands are ended by <LineFeed> character.